



INTRODUCTION

Thinkcar Oscope, an 8-channel computerized PC version of the oscilloscope, the machine is powered by a USB cable connected to a PC, and the data is displayed on the PC for easy saving and sharing.

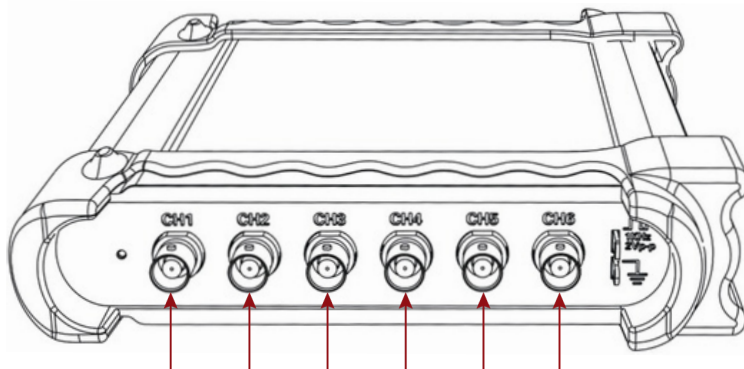

Signal Input Channel CH1-CH6: Used to connect with the probe.

Probe compensation output and ground; Used to calibrate probe.

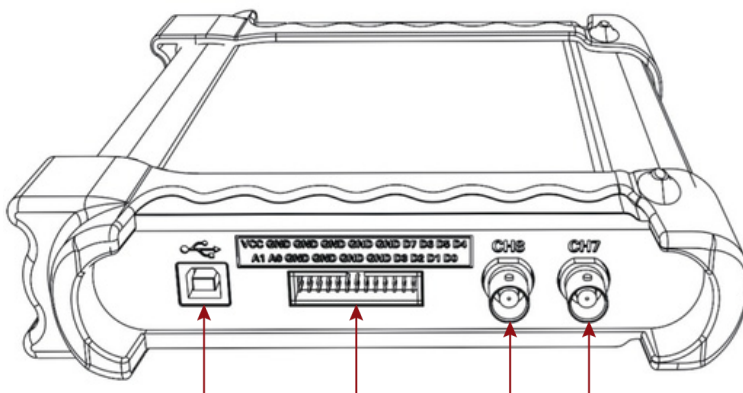

USB port: Used to connect the scope

Digital output Channel: Used to output digital signal

Signal Input Channel CH7-CH8: Used to connect with the probe.

STEP

Download

First, enter the following address in PC's browser:

<http://www.thinkcar.com/downloads>, download the Thinkcar Oscopce installation file.

Install Software


Double click Thinkcar Oscopce.exe. According to the information, install the software step by step.

There will be "Thinkcar Oscopce" icon on desktop.



Thinkcar Oscopce

Connect the device with PC

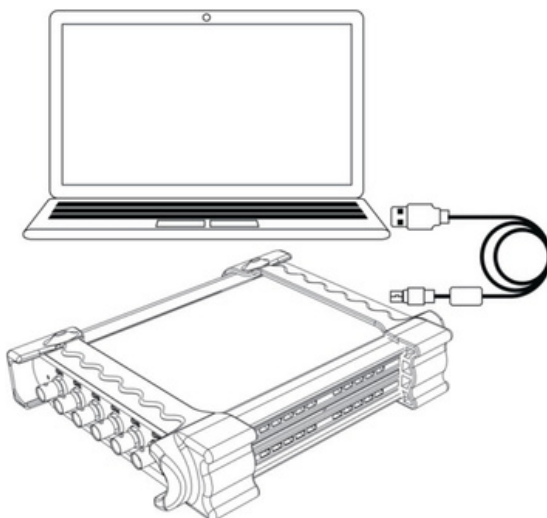


Run the software

Double click  icon on desktop to run the software. Select the channel, access the signal, the waveform will be displayed, the specific operation steps can be referred to the User manual.


INTRODUCCIÓN

THINKCAR Oscopio , una versión computarizada del osciloscopio para PC de 8 canales, la máquina se alimenta mediante un cable USB conectado a una PC y los datos se muestran en la PC para guardarlos y compartirlos fácilmente.

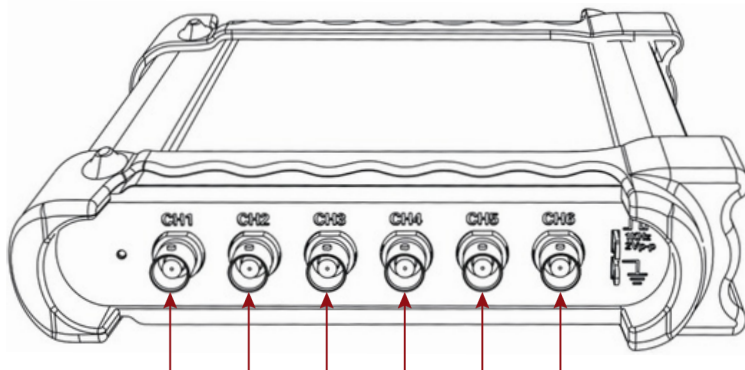

Canal de entrada de señal CH1-CH6:
Se utiliza para conectar con la sonda.

Salida de compensación
de sonda y tierra; Se utiliza
para calibrar la sonda.

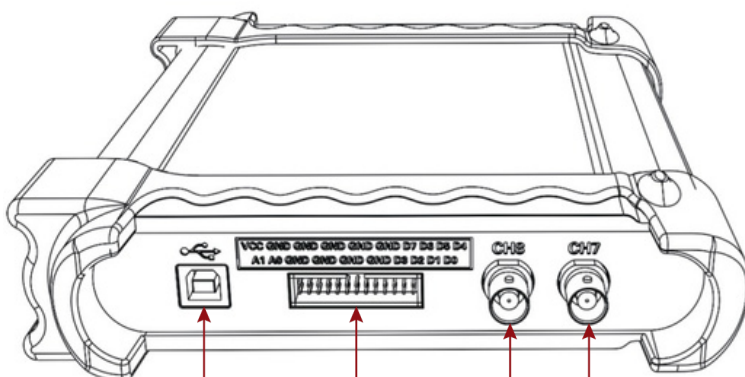

Puerto USB: Se utiliza
para conectar el Scope
con el PC

Canal de salida digital:
Se utiliza para emitir
señal digital.

Canal de entrada de señal
CH7-CH8: Se utiliza para
conectar con la sonda.

PASOS

Descargar

Primero, ingrese la siguiente dirección en el navegador de la PC:
<http://www.thinkcar.com/downloads>, descargue Thinkcar Archivo de instalación del osciloscopio.

Instalar software


Doble click en Thinkcar Oscope.exe. De acuerdo con la información, instale el software paso a paso .

Habrá un icono " Thinkcar Oscope" en el escritorio.



Thinkcar Oscope

Conecte el dispositivo con la PC

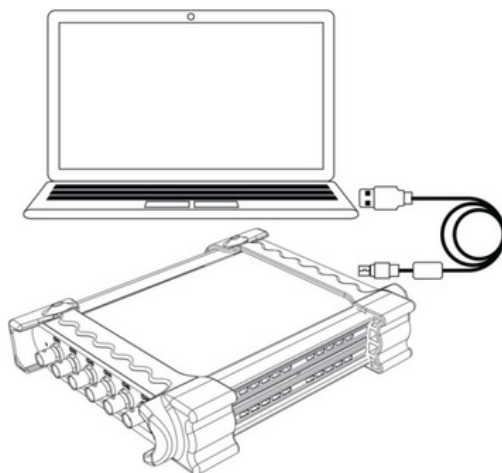

Ejecute el software

Haga doble click  en el icono del escritorio para ejecutar el software. Seleccione el canal, acceda a la señal, se mostrará la forma de onda, los pasos de operación específicos se pueden consultar en el manual del usuario.